ProSoft Connectors


PLX51 Historical Values

This connector is used to download data from one or more PLX51 DLplus 232 data loggers to a local database from which data can be retrieved for reporting.

Configure Data Logging


Configuration for the ProSoft Data Logger Plus is performed from the ProSoft PLX50 Configuration Utility. The information below briefly outlines the device configuration. For more detailed setup information, refer to the PLX51-DLPlus-232 User Manual. Both the configuration utility and device user manual are available on the official ProSoft website.

From the Configuration Utility:

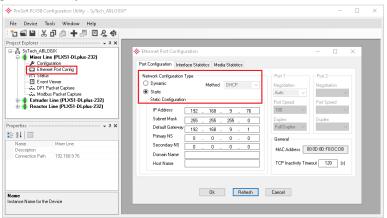

- Click the "+" button to add a new device.
- Select PLX51-DLplus-232.
- Open the **Ethernet Port Config** menu.
- Set the Network Configuration Type based on the network environment where the device is installed.

In the **Configuration** menu:

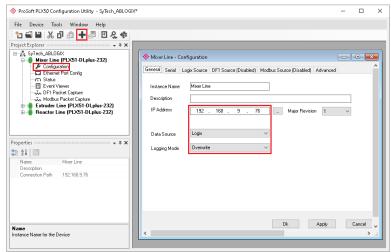


- Assign an Instance Name to indicate the nature of the data logged by the device. In this
 example, the configuration represents a production line which involves mixing machinery.
- Assign a **Data Source** based on the type of PLC connected to the Data Logger.

ProSoft Connectors -1 -


- It is recommended to set Logging Mode to Overwrite for continuous logging using XLReporter.
- Click **Apply.** Download the configuration to the device.

Based on the **Data Source**, open the corresponding **Source** tab in the Configuration menu. The below example shows configuration for an Allen-Bradley Logix PLC.

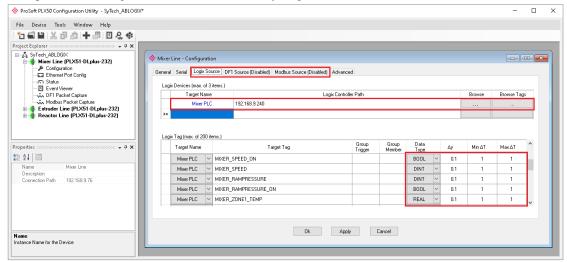

- Assign a Target Name which indicates the purpose of the connected PLC. In the above example, 192.168.9.240 is the IP address of the PLC.
- Open **Browse** to select the device using network discovery.
- Open **Browse Tags** to select the tags logged by the Data Logger.
- For each tag, assign the value deadband (▲y), minimum, and maximum timed rates at which the tag data is logged. It is recommended to configure logging resolution only as high as is required for reporting. Doing so optimizes the responsiveness of the reporting application.
- Click **Apply** and download the configuration to the device.

Connector

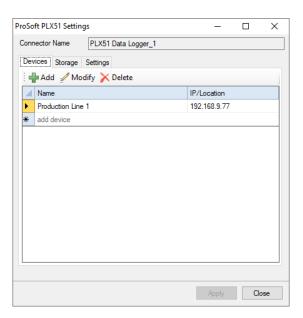

Devices Tab

This tab displays all the devices configured to retrieve data for the connector.

Click **Add** to open the **Device Setup** dialog and add a new device.

ProSoft Connectors -2 -

Device Setup

IP/Location Login User Login Password Running: 1 ConfigValid: 1 ContinousLogging: 1 Rollover: 1 LoggingInhibited: 0 LogaingStopped: 0	Production Line 1	Veri	ifγ device	>
Running: 1 ConfigValid: 1 ContinousLogging: 1 Rollover: 1 LoggingInhibited: 0 LoggingStopped: 0	92.168.9.77	Veri	ífy device	
Running: 1 ConfigValid: 1 ContinousLogging: 1 Rollover: 1 LoggingInshibited: 0 LoggingStopped: 0		Veri	fy device	
Running: 1 ConfigValid: 1 ContinousLogging: 1 Rollover: 1 LoggingInhibited: 0 LoggingStopped: 0		Veri	fy device	
ConfigValid: 1 ContinousLogging: 1 Rollover: 1 LoggingInhibited: 0 LoggingStopped: 0		Veri	fy device	
ConfigValid: 1 ContinousLogging: 1 Rollover: 1 LoggingInhibited: 0 LoggingStopped: 0				
ConfigCRC; 59691 LogIndex: 10306321 UnloadIndex: 103215 DataSource: Ethento currentDate Time: 20: currentUTC: 161005 seriaNum: 8DF0DFT instance: PS77 totalRecordCount: 16 cacheRecordCount: 2 cacheRecordCount: 2	et/IP 21/01/07 22:04:23 7063 C 6777216 16761622	ПК	Canco	

For the device set **Device Name** to a descriptive name for the device. This name appears whenever tags are browsed for the connector.

Set IP/Location to the IP address of the device.

Click **Verify Device** to test connectivity and data retrieval from the device.

Storage Tab

ProSoft PLX5	1 Setting	gs		_		×
Connector Na	ame	PLX5	Data Logger_1			
Devices S	torage	Settings				
Target						
○ Text F	ile l	Folder	C:\XLRprojects\XLR_Demo\	Data		
	1	File	{date}-{device}			
0		_				_
Datab		Гуре	Microsoft Access	D-1-/ VI I	24-4-6	
	,		C:\XLRprojects\XLR_Demo\		roatabase	
	L	rurge	Data Older Than 90 🖨	day(s)		
Scan Ra	te					
Every		5	minute(s) ∨	Start 1	2:00:00 AI	M 💠
On Appl	у	Creat	e Database Tables			
	[ate Data Transfer			
				Apply		Close

This tab displays the settings that determine where the data is stored on the local machine.

Target

The target settings determine the database where the device data is stored. A browse pushbutton [...] is provided to define the connection to the database.

For applications with high data volume, a third-party database server such as Microsoft SQL Server is recommended. For small systems, a built-in Microsoft Access database is available in the \Data directory of the project.

ProSoft Connectors - 3 -

The **Purge Data** option is provided to help control the size of the database.

Scan Rate

This setting defines the interval at which data is collected from the data logger devices into the **Target Database**.


On Apply

These options are triggered when the Apply button is clicked.

Create Database Tables creates all the necessary tables in the Target Database. If these tables already exist they will be overwritten. This setting is enabled default during initial setup of the connector.

Validate Data Transfer validates the connection between XLReporter and the REST server on each configured data logger device.

Settings Tab

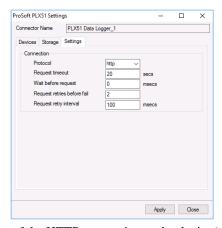

This tab displays the parameters of the HTTP connection to the device(s).

Protocol can be either *http* or *https*. If a secure connection is required, use *https*, otherwise use *http*.

Request timeout is the number of seconds to wait for a request to complete before a timeout error occurs. The default is 20 seconds.


Wait before request is the number of milliseconds to wait between connecting to Talk2M and requesting data. The default is 0 milliseconds.

Request retries before fail is the number of times the request is retried before it is considered an error when the request fails. The default is 2.

Request retry interval is the number of milliseconds to wait between each retry if a request fails. The default is 100.

Schedule

As a consequence of the **Scan Rate** setting, a schedule is added to the **Schedule Designer**.

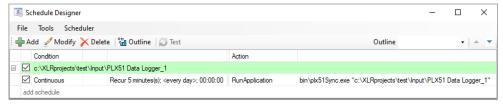


ProSoft Connectors - 4 -

Data Group

The following describes the historical data group settings specific to the **PLX51 History Values** connector.

Group Types

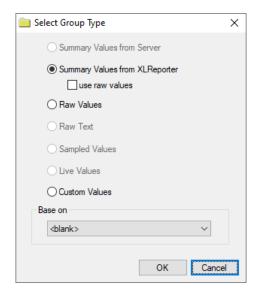

For **PLX51 History Values** the following group types are available:

Summary Values from XLReporter

This group type retrieves sampled values from the database and performs calculations on those samples for reporting.

By default, summary values are calculated time weighted and values are propagated based on the last known value. However, to change this so that summary values are calculated strictly on the data returned check **use raw values**.

Raw Values


This group retrieves every numeric value logged to the database between the start and end time specified.

By default, the **Output Options** on the **Columns** tab of the Data Group settings is set to *Timestamp on First Column* which does not display millisecond-resolution timestamps. Millisecond timestamps are enabled with *Timestamp, Millisecond on first column*.

Custom Values

This option opens the Database Group builder where a query can be configured to retrieve data from any table in the database.

Group Settings Setup Tab

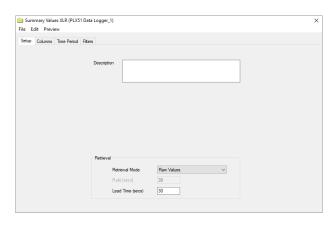

ProSoft Connectors - 5 -

Retrieval (Summary Values for XLReporter Group)

The **Retrieval** settings define how data is retrieved for the calculations selected for the group. The following settings are available:

• Retrieval Mode

This setting defines how data is retrieved from the historian. For the PLX51 Data Logger only *Raw Values* are available.

Lead Time


The amount of time (in seconds) to retrieve data before the start time.

Verify the Data Connector

XLReporter retrieves data for a report using a **History Group**. A quick way to create a **History Group** is from the **XLReporter Project Explorer**.


- Select, Tools, Connector Groups
- Select the connector
- Select Add.
- Set the Group Type to Raw Values and click OK.

On the **Columns** tab of the group, select the tag Name(s).

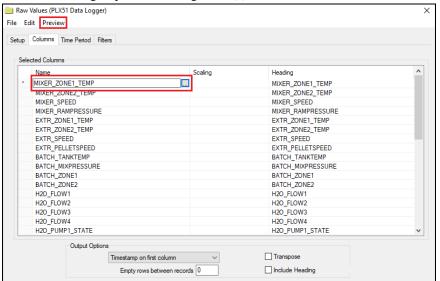

From the menu bar:

- Click Preview
- Enter a Start date
- Click Refresh.

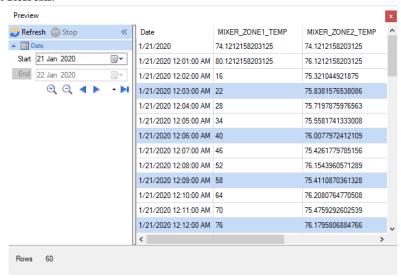

ProSoft Connectors - 6 -

Information in this document is subject to change without notice. SmartSights, LLC assumes no responsibility for any errors or omissions that may be in this document. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of SmartSights, LLC.

Copyright 2000 - 2024, SmartSights, LLC. All rights reserved.

XLReporter® is a registered trademark of SmartSights, LLC.

Microsoft® and Microsoft Excel® are registered trademarks of Microsoft, Inc. All registered names are the property of their respective owners.

ProSoft Connectors - 7 -